

Installation Instruction

(Chevrolet Equinox 2017+)

Precautions

- All pictures in this manual are for reference only. Pictures and objects may differ, but the installation method is the same.
- In order to facilitate your installation, please carefully read the product manual before installation; When installing, protect your car's surface and avoid scratching.
- Please check regularly if all accessories connected with the car are loose to ensure safety.

Installation Steps

Refer to the parts list and accessory drawings to check if the accessories are complete. After the product is installed, press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds. Tail gate learning is finished.




1. Use the original car ball head to install our brace rod (Left and right steps are the same).



2. Remove the original car left lower bracket. Install our left lower bracket and fix it with our screws.



3. Remove the original right lower bracket. Install our right lower bracket and fix it with our screws.

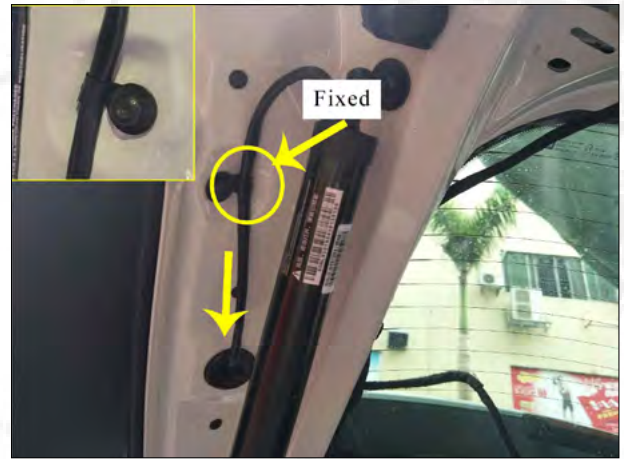


4. The Hall line is routed and fixed with a clamp as shown in the figure. And the Hall line passes through this reserved hole and put the rubber plug.




5. Right Hall line lead routing.



6. Remove the trim panel on the left side of the tailgate and find the power supply.

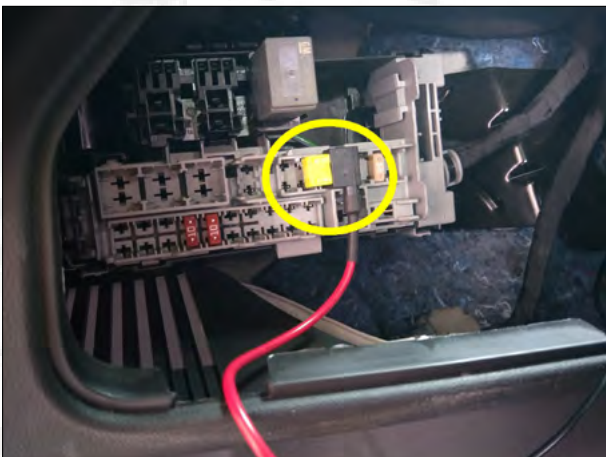

7. Power supply

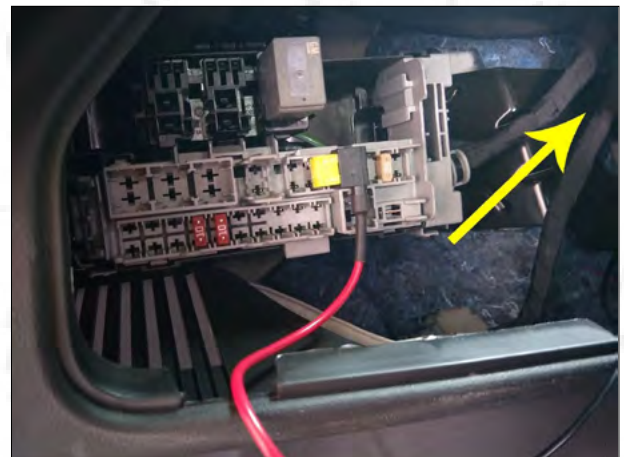

8. Find the ground wire on the right side of the power supply.




9. Connect the ground wire.



10. Under the main driving, remove the trim panel, punch and install our front switch button.



11. Remove the trim panel at the main driving seat belt B-pillar and find the central control.

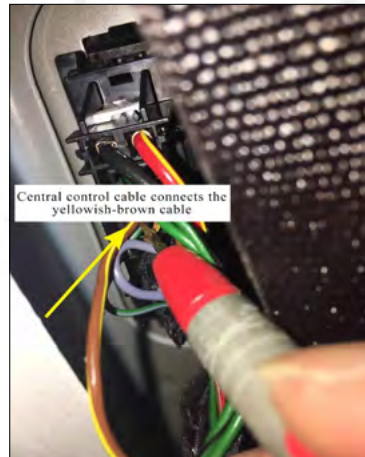


12. The central control cable is connected to the yellowish-brown cable (The fourth hole in the first row from left to right).



13. At the rear door lock position, unplug the original car socket and insert our three-way socket. And the other end three-way plug back the lock.



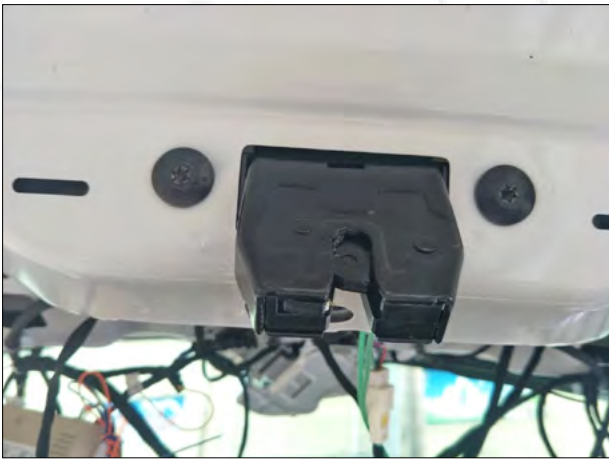

14. Remove the original door lock, install our top electric suction lock and fix it with the original car screws.



15. According to the color, insert the Hall line cable socket, the power cable socket and the electric suction lock cable socket into the control box.



16. Installation position, fixed with our screws and gaskets.



17. Punch holes in the original car tailgate trim panel, and install our tailgate button switch, then restore the trim panel.

After the installation is complete, you must set the tailgate learning. Make sure that the door can be opened and closed in place. (Raise the tailgate to ideal height. Then press the tailgate button for 3-5 seconds. You will hear a sound "DI——" and then loose your hand. Press the tailgate button again and close it. You will hear two sounds "DI DI". Tail gate learning is finished.) If you do not hear two sounds, learning is unsuccessful and you need to re-learn. If you can not close the door, use your hand to push the door to close when you are learning.

Disclaimer

Due to improper installation and improper use, caused the relevant issues and losses, these not include within our company 's warranty. Thanks for your purchasing our products. Please read the manual carefully before use and collect it for later reference.

Key Control Method

1. Press the original Key fobs three times to open and close the door.
2. Press the front switch button to open and close the door.

Setting Height

1. Raise the tailgate to the ideal height;
2. Press the tailgate switch for 3-5s;
3. When you hear a long sound "Di——", loose your hand and press the tailgate switch again to close the door.
4. When you hear two sounds "Di Di", Setting height is finished.

Note: Do not close the door with your hands after setting the ideal height.

Be sure to use our own tailgate switch.

Fault Solution

The original key fob does not work	Check if the yellowe central control line is connected.
Not working after installation	1. Check if the positive power supply is connected with 12V-16V. 2. Check if the power fuse is inserted. 3. Check if the ground wire is connected.
Closing the tailgate not in place The tailgate can only open to half	1. Check if the left and right bracket are installed reversed. 2. Check if the control box wire is inserted. 3. Check if the brackets are fixed with our screws. 4. There are two rubbers on the left and right sides of the original tailgate cover. Check if they are loose and need to be tightened.